

**Note**


---

Fastening of cover under instrument panel has been modified in September 1979. Pay attention to different version during removal.


**Removal (1st version)**

---


- 1 Remove screw on front wall pillar.

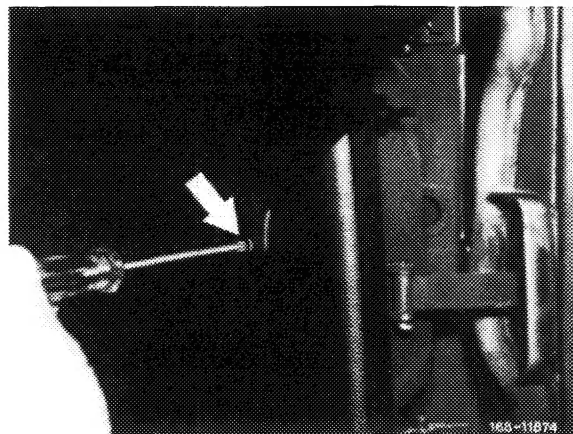

- 2 Remove screw at bottom heater outlet opening.

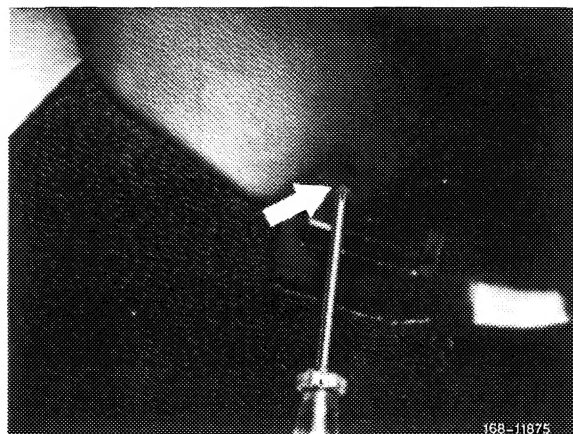


- 3 Pull cover down and out of instrument panel.

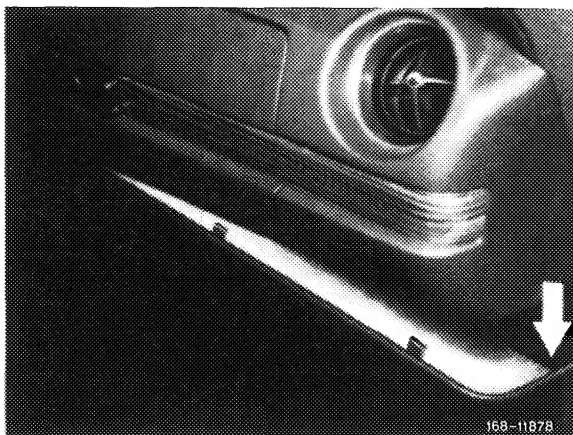


## Removal (2nd version)

---


1 Turn fastening plug at front pillar by 90° and pull out. Use dash mark on head of fastening plug for checkup during rotation.

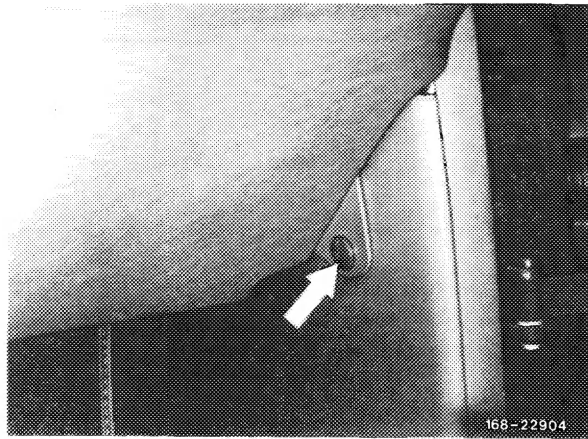


2 Turn fastening plug at lower heater outlet opening by 90° and pull out.

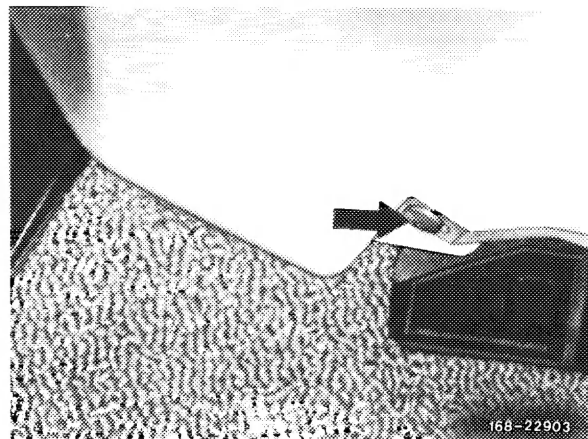

3 Push out the three caps at bottom on instrument panel.

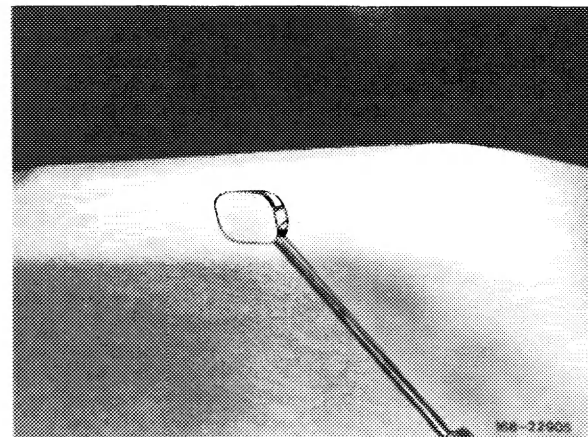

4 Unscrew fastening screws and remove cover.

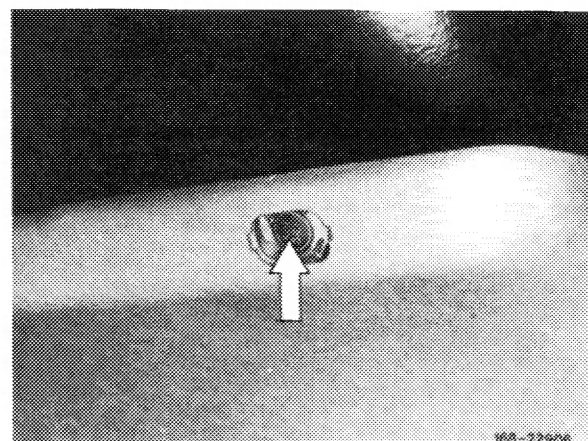

## Installation

---

- 5 Attach cover into front wall insulation at front first.
- 6 For further installation proceed vice-versa.

